
## pittsburgh modular synthesizers structure enclosure internal power supply

information

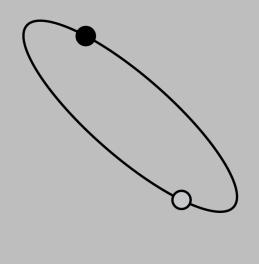

## **POWER SET FOR EU AND AUSTRALIA 220-230V**



The Pittsburgh Modular Structure 208 and Structure 360 eurorack enclosures use a switching power supply that needs manually set to the correct AC input voltage. The internal switch has already be properly set for 220-230 VAC. This setting works for the EU and Australia or other countries that use 220-230 VAC power.

For use in countries that use 100-120 VAC power, such as North America and Japan, the switch inside the case on the AC/DC regulator needs to be switched to the left. The switch is marked with a Yellow sticker printed with "AC input voltage can be selected by switch. Check input voltage avoiding damage before power on." The switch is located on the side of the enclosure below the arrow.

Please contact us with any questions. service@pittsburghmodular.com

