


pittsburgh
modular
synthesizers
structure
enclosure
internal
power supply
information

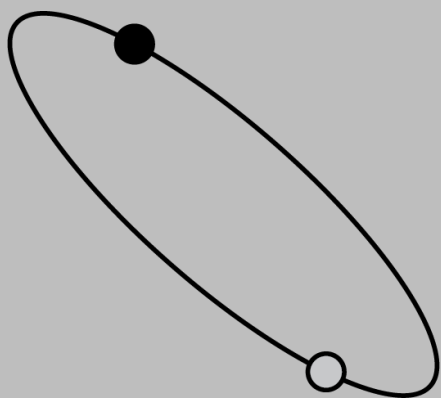

POWER SET FOR NORTH AMERICA AND JAPAN 100-130V



The Pittsburgh Modular Structure 208 and Structure 360 eurorack enclosures use a switching power supply that needs manually set to the correct AC input voltage. The internal switch has already been properly set for 100-130 VAC. This setting works for North America and Japan or other countries that use 100-130 VAC power.

For use in countries that use 220-240 VAC power, such as the EU and Australia, the switch inside the case on the AC/DC regulator needs to be switched to the right. The switch is marked with a Yellow sticker printed with "AC input voltage can be selected by switch. Check input voltage avoiding damage before power on." The switch is located on the side of the enclosure below the arrow.

Please contact us with any questions. service@pittsburghmodular.com

